



Cam-action door closers

DORMA TS 92

TS 92 TS 91





The universal closers for standard doors - tested and approved to EN 1154

As units designed especially for interior applications, the DORMA TS 92 and TS 91 door closers constitute the perfect complement to the DORMA TS 93 cam-action door closer system. They likewise come in the Contur design and, thanks to their linear drive mechanism with heart-shaped cam, they offer the same ease of use.

Moreover, their competitive pricing combined with their outstanding level of assured quality make them particularly attractive from an economic standpoint as

Certified to ISO 9001

\mathbf{D}_{\wedge}	nof	
1 314	nef	шs

for the trade

- Inexpensive cam-action technology for standard interior doors.
- Low storage costs and reduced inventory requirement thanks to uniform slide channels of the Contur series.

for the fabricator

- Non-handed.
- Easy to fix and quickly adjustable.

for the architect/specifier

- Excellent value for money.
- Uniform appearance throughout the entire Contur slide channel range.

for the user


- Exceptional ease of use and fully controlled closing action.
- Optimum adaptability of the closing speed with reliable latching thanks to two regulating valves.

Data and features		TS 92 B/G ¹⁾	TS 91 B
Closing force Adjustable	EN size	2-4	3 –
Standard doors ²⁾	up to 950 mm up to 1100 mm	- •	• -
External doors, outw			
Fire and smoke che	•	•	
Non-handed design	•	•	
Arm assembly	Slide channel	•	•
Closing speed and la action independentl adjustable at two separate valv	•	•	
Cushioned limit stay	0	0	
Backcheck	_	_	
Delayed action	_	_	
Hold-open	0	0	
Weight in kg	2,0	1,9	
Dimensions in mm	Length Overall depth Height	281 47 65	267 47 65
Door closer approve	•	•	
C € mark for buildin	•	•	

- yes no option
- $^{1)}$ B = Standard model for pull-side door leaf fixing/push-side transom fixing. G = Special model for push-side door leaf fixing/pull-side transom fixing.
- 2) For particularly heavy doors and doors which have to close against wind resistance, we recommend the DORMA TS 93.




The TS 92/TS 91 complies with the requirements and/or recommendations of the following:
CERTIFIRE approved for fire doors ITT 120, MM/IMM 240;
Ref. CF 119

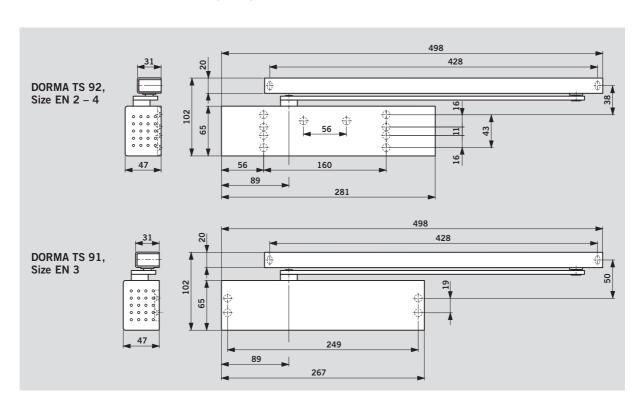


DORMA TS 92 DORMA TS 91

Standard and optional functions



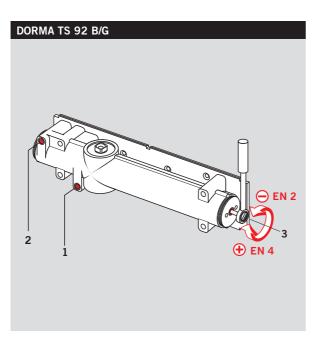


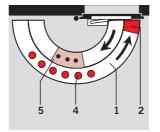


- 1 Variable closing speed in the range $180^{\circ}-15^{\circ}$
- 2 Variable latching speed in the range $15^{\circ}-0^{\circ}$
- **3** Infinitely variable closing force
- 4 Hold-open (option)
- **5** Cushioned limit stay (option)

The **closing speed** of the DORMA TS 92 is individually adjustable over two independent ranges at two separate valves.

The closing force setting (spring strength) for the relevant door width is adjusted with the DORMA TS 92 at an infinitely variable lateral adjustment screw.

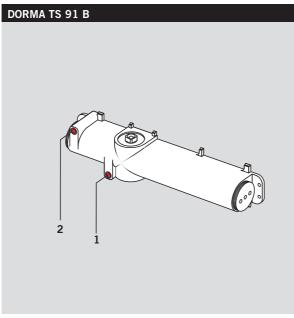


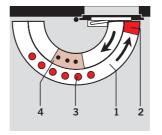

- 1 Infinitely variable closing speed in the range $180^{\circ}-15^{\circ}$
- 2 Infinitely variable latching speed in the range $15^{\circ}-0^{\circ}$
- 3 Hold-open (option)
- **4** Cushioned limit stay (option)

The **closing speed** of the DORMA TS 91 is individually adjustable over two independent ranges at two separate valves.

The closing force (spring strength) in the DORMA TS 91 is permanently set to size EN 3.

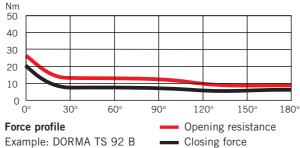


Example: DORMA TS 92 B Closing force setting:

size EN 3

The heart-shaped cam and the linear drive mechanism which characterise all DORMA cam-


action door closers produce a rapidly decreasing opening torque, so greatly reducing the amount of effort required. This means that even children, the elderly and the disabled can open doors with ease. The user-friendliness of the system is further enhanced by the reliable latching action achieved by the fact that the closing force only rises in the end phase of the cycle.

Door leaf fixing, pull side (example shows LH [ISO 6] door; RH [ISO 5] doors mirrored arrangement)

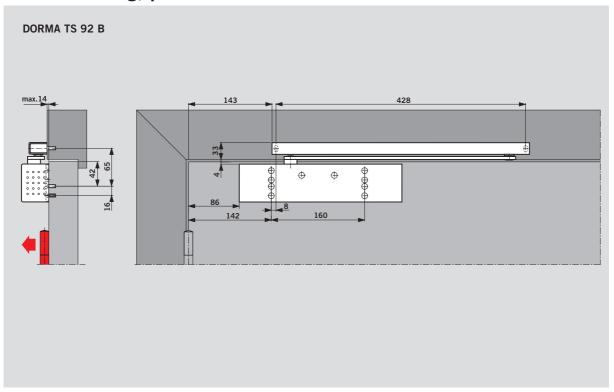

Provided the structural conditions allow, an opening angle of 180° is possible with this method of fixing. In most cases, however, a wall recess will have to be provided for the door closer.


Transom fixing, push side (example shows LH [ISO 6] door; RH [ISO 5] doors mirrored arrangement)

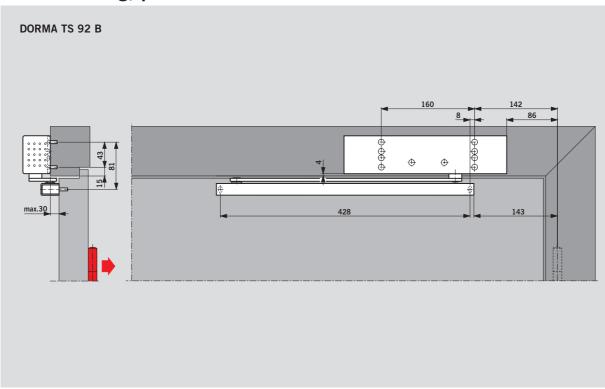

Depending on the structural conditions, the door opening angle with this method of fixing is limited to approx. 120° to 145°. In order to avoid damage to the door or door closer, users are recommended to install a cushioned backstay or a door stop.




Door leaf fixing, push side (example shows LH [ISO 6] door; RH [ISO 5] doors mirrored arrangement)

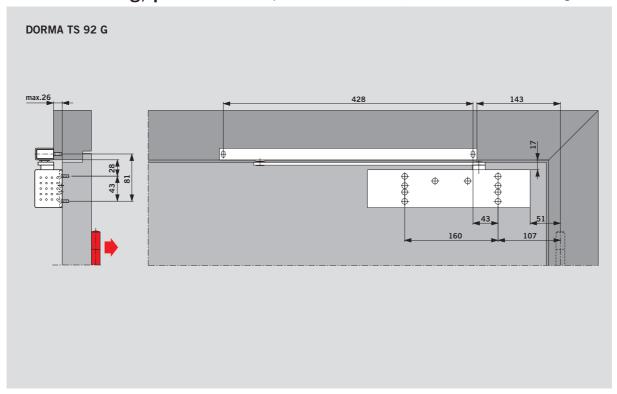


Depending on the structural conditions, the door opening angle with this method of fixing is limited to approx. 120° to 145° . In order to avoid damage to the door or door closer, users are recommended to install a cushioned backstay or a door stop.

Transom fixing, pull side (example shows LH [ISO 6] door; RH [ISO 5] doors mirrored arrangement)

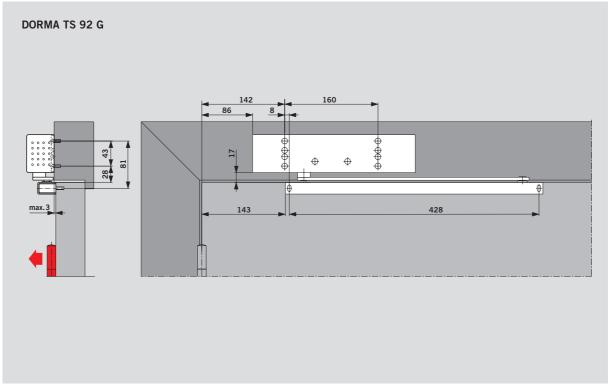


Provided the structural conditions allow, an opening angle of 180° is possible with this method of fixing.

Door leaf fixing, pull side (example shows LH [ISO 6] door; RH [ISO 5] doors mirrored arrangement)

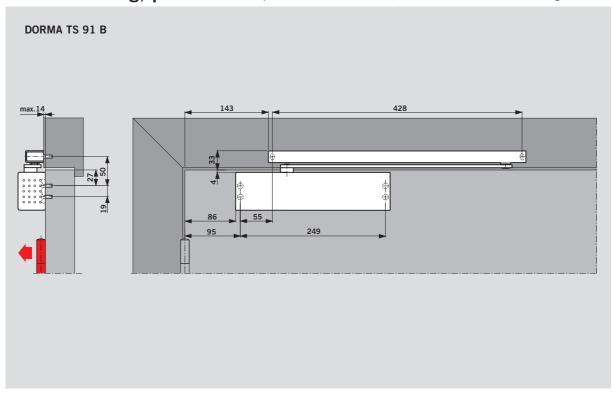

Provided the structural conditions allow, an opening angle of 180° is possible with this method of fixing. In most cases, however, a wall recess will have to be provided for the door closer.


Transom fixing, push side (example shows LH [ISO 6] door; RH [ISO 5] doors mirrored arrangement)

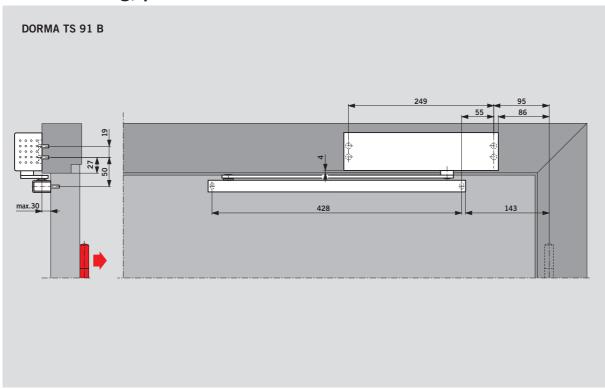

Depending on the structural conditions, the door opening angle with this method of fixing is limited to approx. 120° to 145°. In order to avoid damage to the door or door closer, users are recommended to install a cushioned backstay or a door stop.




Slide channel

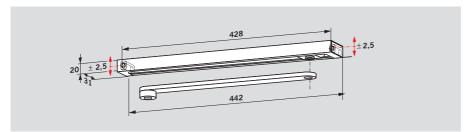

The **DORMA G-N** slide channel assembly comprises the main arm, slide channel, slide block, fixings, screws and end caps. The DORMA G-N slide channel

is non-handed and can be combined with both door closers. Thanks to oblong holes in the fixing pads, it is possible to compensate for deviations in the drill hole pattern and to keep the door closer body and slide channel perfectly parallel.

Hold-open unit

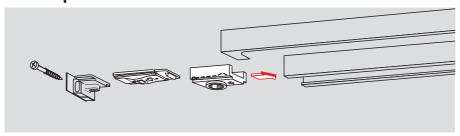

150° 75° Hold-open range


The DORMA RF mechanical hold-open unit ensures that doors are held open at precisely the correct angle – up to approx. 150° – without any fallback.

The hold-open unit can be switched on and off by the user as required, and the pull-off force can be adjusted to suit each individual door situation.

The DORMA RF hold-open unit is non-handed and can also be supplied for retrofitting to the slide channel at a later date.



Cushioned limit stay

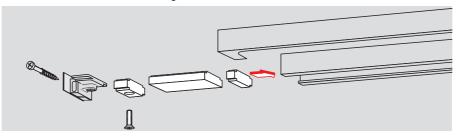


max. 120° 80°
Cushioned limit stay

Cushioned limit stay simply slides into the slide channel. Adjustable between 80° and max. 120°. Also suitable for retrofitting.

Fitting a cushioned limit stay prevents doors which are opened normally from impacting against adjacent walls. The cushioned limit stay is not an overload protection device and in many applications will not be a suitable substitute for a door stop.




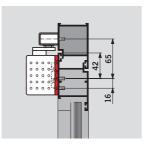


Mounting backplate for DORMA TS 91

For fixing to doors which provide no means of direct mounting.


Fixing hole pattern as per Supplement 1 to EN 1154.

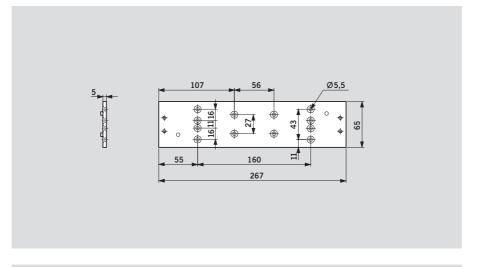


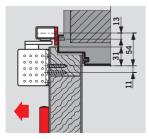

Mounting backplate 30 mm for G-N


For fixing the slide channel to the door frame where there is no means of direct mounting.

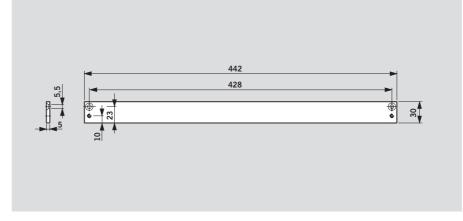

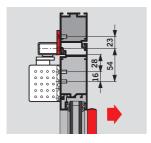


Mounting backplate 40 mm for G-N


For fixing the slide channel to the door frame where there is no means of direct mounting.

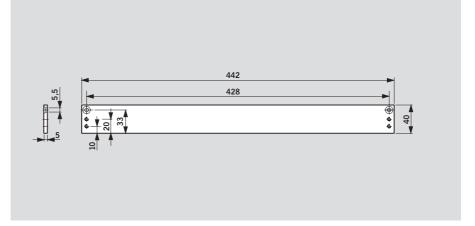




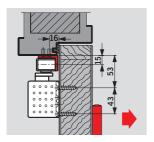

Angle bracket for G-N
For push-side fixing of the slide channel to door frames with a deep reveal.

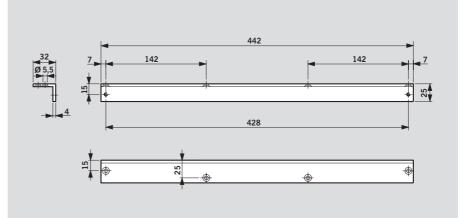


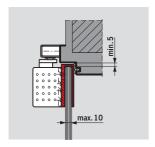

Glass door saddle plate for DORMA TS 92

For fixing the closer to toughened glass doors

- No glass drilling or recessing required.

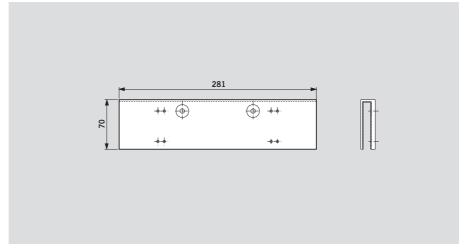

DORMA TS 92 DORMA TS 91

Cam-action door closers

Standard equipment and ac	cessories						
	Cam-action door closer TS 92 B	Cam-action door closer TS 92 G	Cam-action door closer TS 91 B	Mounting backplate for G-N	Angle- bracket for G-N	Cushioned limit stay for G-N	Hold-open unit for G-N
	Size EN 2-4	Size EN 2-4	Size EN 3	30 mm 644000xx 40 mm		900	
	420201xx	420301xx	4 10201xx		644300xx	35800093	18570000
Slide channel G-N	-	-	-	#	#	#	#
☐ 640100xx							
Mounting backplate for TS 91 410002xx			#				
Glass door saddle plate for TS 92 420001xx	#	#					

Order number:

■ = Closer body separate

☐ = Arm assembly separate

 $\overline{\#}$ = Accessory

Colour

Silver

Special colour White (RAL 9016)

The TS 92 is also available хх in our "Design" surface 01

finishes.

09

11

Stainless steel "Design" 04

Polished brass 05



Specification text TS 92 B/G

Cam-action door closer, CERTIFIRE approved (CF 119), in Contur design with linear drive and rapidly decreasing opening resistance/torque, adjustable closing speed in two independent ranges and mounting backplate with universal fixing hole pattern; closing force infinitely variable between size EN 2 and EN 4. Non-handed. Approved to EN 1154.

Accessories ☐ Hold-open unit □ silver

- ☐ Cushioned limit stay \square Mounting backplate for G-N \square Angle bracket for G-N
- ☐ Saddle plate for toughened glass doors

Colour

- ☐ white (sim. to RAL 9016) □ stainless steel □ polished brass
- ☐ special colour (sim. to RAL)

Make

DORMA TS 92 B DORMA TS 92 G

- Model □ TS 92 B
- □ TS 92 G

Specification text TS 91 B

Cam-action door closer, CERTIFIRE approved (CF 119), in Contur design with linear drive and rapidly decreasing opening resistance/torque, adjustable closing speed in two independent ranges and mounting backplate with universal fixing hole pattern; closing force EN 3. Non-handed. Approved to EN 1154.

Accessories

- ☐ Hold-open unit \square Cushioned limit stay
- \square Mounting backplate for G-N
- ☐ Mounting backplate

Colour

- □ silver
- \square white (sim. to RAL 9016) ☐ special colour (sim. to RAL)

Make

DORMA TS 91 B

Частное торгово-производственное унитарное предприятие «Новые электросистемы»

220024 г. Минск, пер. Корженевского, д. 2а, офис 14

(017) 228-00-00

(017) 207-54-44

(017) 212-77-19

E-mail: info@electrosystem.by

<u>Caŭm</u>: www.electrosystem.by